



April 3, 2023

Times Microwave Systems  
358 Hall Avenue  
Wallingford, CT 06492

To Times Microwave Systems Authorized Distributors:

Thank you for being a valued partner of Times Microwave Systems as one of our authorized Distributors. Attached is a Commercial Product Index for your reference. This list includes the most common TMS commercial products with indication if the item is Active or Obsolete. If an item is Obsolete and has a replacement it will be noted in the description. Products on this list are broken down into two Categories "A" and "B". The differentiation is listed below.

**Category A Products**

- Suggested products for Distributors to inventory
- Distributor Discounts applicable
- Standard 2–4-week lead time
- Stock Rotation Program applicable
- Bulk Purchase Program applicable
- 60-day notice for pricing increase for authorized Distributors per contract

**Category B Products**

- All Category B Products are NCNR.
- Distributor Discounts applicable for items with pricing if no price listed contact customer service for quote
- Lead times quoted based on requirements and availability, contact customer service for quote
- Can NOT be applied to the Stock Rotation Program
- Can NOT be applied to the Bulk Purchase Program
- MOQs applicable where indicated.

The Daily Inventory Report will be updated to include all items in this new Commercial Product Index. Obsolete products with inventory appearing on the Daily Inventory Report can still be ordered, but the product will not be supported once inventory is depleted. Please reach out with any questions and thank you for your continued partnership.

Best regards,

Carrie Obedzinski  
Distribution and Customer Service Sales Manager  
Cell: 475.557.1115  
[Carrie.obedzinski@timesmicro.com](mailto:Carrie.obedzinski@timesmicro.com)

PN		stokc code				status	
TC-100-SM	SM	100	Connector	3190-1551		B	<b>Obsolete</b>
TC-100-TM	TM	100	Connector	3190-1552		B	<b>Obsolete</b>
LMR-195-L	LLPL	195	Cable	54211		B	<b>Obsolete</b>
LMR-195-L	LLPL-W	195	Cable	54159		B	<b>Obsolete</b>
TC-195-NM	NM	195	Connector	3190-1555		B	<b>Obsolete</b>
TC-195-NM	NM-RA	195	Connector	3190-2425		B	<b>Obsolete</b>
TC-195-NM	NM	195	Connector	3190-2880		B	<b>Obsolete</b>
TC-195-SM	SM	195	Connector	3190-1553		B	<b>Obsolete</b>
TC-195-TM	TM	195	Connector	3190-1554		B	<b>Obsolete</b>
TC-195-TM	TM	195	Connector	3190-2879		B	<b>Obsolete</b>
LMR-200-L	LLPL	200	Cable	54058		B	<b>Obsolete</b>
EZ-200-FM	FM-75	200	Connector	3190-1611		B	<b>Obsolete</b>
EZ-200-NM	NM-75	200	Connector	3190-1612		B	<b>Obsolete</b>
EZ-200-NM	NM	200	Connector	3190-2886		B	<b>Obsolete</b>
EZ-200-TM	TM-RP	200	Connector	3190-792		B	<b>Obsolete</b>
EZ-200-TM	TM	200	Connector	3190-2885		B	<b>Obsolete</b>
TC-200-NM	NM-RP	200	Connector	3190-959		B	<b>Obsolete</b>
TC-200-SM	SM-RP	200	Connector	3190-327		B	<b>Obsolete</b>
TC-200-SM	SM	200	Connector	3190-2881		B	<b>Obsolete</b>
TC-200-TM	TM	200	Connector	3190-240		B	<b>Obsolete</b>
LMR-240-L	LLPL	240	Cable	54059		B	<b>Obsolete</b>
EZ-240-FM	FM-75	240	Connector	3190-1613		B	<b>Obsolete</b>
EZ-240-NM	NM-75	240	Connector	3190-1614		B	<b>Obsolete</b>
EZ-240-NM	NM	240	Connector	3190-2893		B	<b>Obsolete</b>
EZ-240-QM	QM	240	Connector	3190-2894		B	<b>Obsolete</b>
EZ-240-SM	SM-RA	240	Connector	3190-2899		B	<b>Obsolete</b>
EZ-240-SM	SM	240	Connector	3190-2897		B	<b>Obsolete</b>
EZ-240-TF	TF-RP	240	Connector	3190-6167		B	<b>Obsolete</b>
EZ-240-TM	TM	240	Connector	3190-2725		B	<b>Obsolete</b>
TC-240-71	716M-RA	240	Connector	3190-2589		B	<b>Obsolete</b>
TC-240-BM	BM	240	Connector	3190-242		B	<b>Obsolete</b>
TC-240-BM	BM-RA	240	Connector	3190-2869		B	<b>Obsolete</b>
TC-240-FM	FM	240	Connector	3190-2891		B	<b>Obsolete</b>
TC-240-NF	NF-PM	240	Connector	3190-866		B	<b>Obsolete</b>
TC-240-NF	NF-BH	240	Connector	3190-2888		B	<b>Obsolete</b>
TC-240-NM	NM-75	240	Connector	3190-477		B	<b>Obsolete</b>
TC-240-NM	NM	240	Connector	3190-244		B	<b>Obsolete</b>
TC-240-NM	NM-RA	240	Connector	3190-2426		B	<b>Obsolete</b>
TC-240-SM	SM-RA	240	Connector	3190-2900		B	<b>Obsolete</b>
TC-240-TM	TM-RA	240	Connector	3190-2798		B	<b>Obsolete</b>
TC-240-TM	TM	240	Connector	3190-2797		B	<b>Obsolete</b>
LMR-300-L	LLPL	300	Cable	54175		B	<b>Obsolete</b>
EZ-300-NM	NM-75	300	Connector	3190-1616		B	<b>Obsolete</b>
TC-300-SF	SF-BH	300	Connector	3190-590		B	<b>Obsolete</b>
TC-300-SM	SM	300	Connector	3190-501		B	<b>Obsolete</b>

TC-300-TM	TM	300	Connector	3190-500		B	<b>Obsolete</b>
LMR-400-L	LLPL	400	Cable	54070		B	<b>Obsolete</b>
EZ-400-FM	FM-75	400	Connector	3190-952		B	<b>Obsolete</b>
EZ-400-FM	FM-75	400	Connector	3190-1617		B	<b>Obsolete</b>
EZ-400-NF	NF-BH	400	Connector	3190-518		B	<b>Obsolete</b>
EZ-400-NM	NM-75	400	Connector	3190-1618		B	<b>Obsolete</b>
EZ-400-NM	NM-RA	400	Connector	3190-2638		B	<b>Obsolete</b>
EZ-400-NM	NM	400	Connector	3190-661		B	<b>Obsolete</b>
EZ-400-QN	QNM	400	Connector	3190-2979		B	<b>Obsolete</b>
EZ-400-UM	UM	400	Connector	3190-997		B	<b>Obsolete</b>
TC-400-716	716M	400	Connector	3190-279		B	<b>Obsolete</b>
TC-400-BM	BM	400	Connector	3190-318		B	<b>Obsolete</b>
TC-400-NF	NF	400	Connector	3190-299		B	<b>Obsolete</b>
TC-400-NF	NF-BH	400	Connector	3190-872		B	<b>Obsolete</b>
TC-400-NF	NF	400	Connector	3190-964		B	<b>Obsolete</b>
TC-400-NM	NM	400	Connector	3190-188		B	<b>Obsolete</b>
TC-400-NM	NM-75	400	Connector	3190-389		B	<b>Obsolete</b>
TC-400-NM	NM-RA	400	Connector	3190-870		B	<b>Obsolete</b>
TC-400-QD	QDSM	400	Connector	3190-620		B	<b>Obsolete</b>
LMR-500-L	LLPL	500	Cable	54060		B	<b>Obsolete</b>
TC-500-NF	NF	500	Connector	3190-215		B	<b>Obsolete</b>
TC-500-NM	NM	500	Connector	3190-377		B	<b>Obsolete</b>
TC-500-NM	NM	500	Connector	3190-900		B	<b>Obsolete</b>
TC-500-NM	NM-RA	500	Connector	3190-227		B	<b>Obsolete</b>
TC-500-NM	NM	500	Connector	3190-2514		B	<b>Obsolete</b>
TC-500-TM	TM	500	Connector	3190-464		B	<b>Obsolete</b>
TC-500-UM	UM	500	Connector	3190-354		B	<b>Obsolete</b>
LMR-600-L	LLPL	600	Cable	54061		B	<b>Obsolete</b>
EZ-600-716	716M-RA	600	Connector	3190-2546		B	<b>Obsolete</b>
EZ-600-FM	FM-75	600	Connector	3190-1619		B	<b>Obsolete</b>
EZ-600-NF	NF-BH	600	Connector	3190-616		B	<b>Obsolete</b>
EZ-600-NM	NM-RA	600	Connector	3190-2639		B	<b>Obsolete</b>
EZ-600-NM	NM	600	Connector	3190-669		B	<b>Obsolete</b>
EZ-600-UM	UM	600	Connector	3190-615		B	<b>Obsolete</b>
TC-600-716	716M	600	Connector	3190-502		B	<b>Obsolete</b>
TC-600-716	716M-RA	600	Connector	3190-2599		B	<b>Obsolete</b>
TC-600-NF	NF-BH	600	Connector	3190-589		B	<b>Obsolete</b>
TC-600-NF	NF-BH	600	Connector	3190-466		B	<b>Obsolete</b>
TC-600-NF	NF	600	Connector	3190-965		B	<b>Obsolete</b>
TC-600-NM	NM	600	Connector	3190-357		B	<b>Obsolete</b>
TC-600-QD	QDSM	600	Connector	3190-825		B	<b>Obsolete</b>
TC-600-UM	UM	600	Connector	3190-213		B	<b>Obsolete</b>
LMR-900-L	LLPL	900	Cable	54062		B	<b>Obsolete</b>
EZ-900-716	716F	900	Connector	3190-1550		B	<b>Obsolete</b>
EZ-900-716	716M	900	Connector	3190-1641		B	<b>Obsolete</b>
EZ-900-716	716M	900	Connector	3190-1549		B	<b>Obsolete</b>

EZ-900-716	716M-RA	900	Connector	3190-614		B	<i>Obsolete</i>
EZ-900-78E	78EIA	900	Connector	3190-1282		B	<i>Obsolete</i>
EZ-900-78E	78EIA-RA	900	Connector	3190-1450		B	<i>Obsolete</i>
EZ-900-NF	NF	900	Connector	3190-1263		B	<i>Obsolete</i>
EZ-900-NF	NF	900	Connector	3190-1586		B	<i>Obsolete</i>
EZ-900-NM	NM	900	Connector	3190-1262		B	<i>Obsolete</i>
EZ-900-NM	NM	900	Connector	3190-1585		B	<i>Obsolete</i>
LMR-1200-	LLPL	1200	Cable	54063		B	<i>Obsolete</i>
EZ-1200-N	NF	1200	Connector	3190-912		B	<i>Obsolete</i>
EZ-1200-N	NM	1200	Connector	3190-911		B	<i>Obsolete</i>
CST-240	ST	Tools	Tools	3192-070		B	<i>Obsolete</i>
CT-240/200	CT	Tools	Tools	3190-667		B	<i>Obsolete</i>
DBT-01	DBT	Tools	Tools	3190-406		B	<i>Obsolete</i>
DBT-02	DBT	Tools	Tools	3190-1706		B	<i>Obsolete</i>
HX-4	CT	Tools	Tools	3190-200		B	<i>Obsolete</i>
ST-240-EZ	ST	Tools	Tools	3190-1880		B	<i>Obsolete</i>
ST-400C-2	ST	Tools	Tools	3190-1972		B	<i>Obsolete</i>
ST-500C	ST	Tools	Tools	3190-229		B	<i>Obsolete</i>
ST-600C	ST	Tools	Tools	3190-230		B	<i>Obsolete</i>
ST-600EZ	ST	Tools	Tools	3190-310		B	<i>Obsolete</i>
ST-900/1200	ST	Tools	Tools	3190-311		B	<i>Obsolete</i>
TC-250-NX	NX10M	250	Connector	3190-6457		B	<i>Obsolete</i>
TC-SPO25	716F	250	Connector	3190-6057		B	<i>Obsolete</i>
TC-SPO25	716M	250	Connector	3190-6056		B	<i>Obsolete</i>
TC-SPO25	716M-RA	250	Connector	3190-6058		B	<i>Obsolete</i>
TC-SPO25	NF	250	Connector	3190-6054		B	<i>Obsolete</i>
TC-SPO25	NM	250	Connector	3190-6053		B	<i>Obsolete</i>
TC-SPO25	NM-RA	250	Connector	3190-6055		B	<i>Obsolete</i>
TC-SPP25	NM-RA	250	Connector	3190-2834		B	<i>Obsolete</i>
TC-SPO37	DF	375	Connector	3190-6057		B	<i>Obsolete</i>
TC-SPO37	716M	375	Connector	3190-6056		B	<i>Obsolete</i>
TC-SPO37	716M-RA	375	Connector	3190-6058		B	<i>Obsolete</i>
TC-SPO37	NF	375	Connector	3190-6060		B	<i>Obsolete</i>
TC-SPO37	NM	375	Connector	3190-6053		B	<i>Obsolete</i>
TC-SPO37	NM-RA	375	Connector	3190-6055		B	<i>Obsolete</i>
TC-SPO50	DF	500	Connector	3190-6067		B	<i>Obsolete</i>
TC-SPO50	716M	500	Connector	3190-6066		B	<i>Obsolete</i>
TC-SPO50	716M-RA	500	Connector	3190-6068		B	<i>Obsolete</i>
TC-SPO50	NF	500	Connector	3190-6005		B	<i>Obsolete</i>
TC-SPO50	NM	500	Connector	3190-6004		B	<i>Obsolete</i>
TC-SPO50	NM-RA	500	Connector	3190-6065		B	<i>Obsolete</i>
TC-SPP50	4310M	500	Connector	3190-6213		B	<i>Obsolete</i>
TC-SPP50	716M	500	Connector	3190-2945		B	<i>Obsolete</i>
TC-SPP50	NM	500	Connector	3190-2946		B	<i>Obsolete</i>
TC-402-XN	NX10M	402	Connector	3190-6435		B	<i>Obsolete</i>
TC-250-NX	NX10M	401	Connector	3190-6457		B	<i>Obsolete</i>

TC-SPO25	716F	401	Connector	3190-6057		B	<b>Obsolete</b>
TC-SPO25	716M	401	Connector	3190-6056		B	<b>Obsolete</b>
TC-SPO25	716M-RA	401	Connector	3190-6058		B	<b>Obsolete</b>
TC-SPO25	NF	401	Connector	3190-6054		B	<b>Obsolete</b>
TC-SPO25	NM	401	Connector	3190-6053		B	<b>Obsolete</b>
TC-SPO25	NM-RA	401	Connector	3190-6055		B	<b>Obsolete</b>
TC-SPP25	NM-RA	401	Connector	3190-2834		B	<b>Obsolete</b>
BH-38-NH	BH	400	Accessories	BH-38-NH		B	<b>Obsolete</b>
BH-S58-NH	BH-S	900	Accessories	BH-S58-NH		B	<b>Obsolete</b>
CH-58-NH	CH	900	Accessories	CH-58-NH		B	<b>Obsolete</b>
WK-2	WK	All	Accessories	WK-2		B	<b>Obsolete</b>

## description

OBSOLETE (use SC-100-SM 3190-2245)
OBSOLETE (use SC-100-TM 3190-2656)
OBSOLETE (use LMR-195-LLPX)
OBSOLETE
OBSOLETE (use TC-195-NMH-X 3190-6543)
OBSOLETE (use TC-195-NMH-RA-X 3190-6542)
OBSOLETE (use TC-195-NMH-X 3190-6543)
OBSOLETE (use TC-195-SM-SS-X 3190-2878)
OBSOLETE (use TC-195-TM-X 3190-6568)
OBSOLETE (use TC-195-TM-X 3190-6568)
OBSOLETE (use LMR-200-LLPX)
OBSOLETE (use EZ-200-FM-75-X 3190-6412)
OBSOLETE (use EZ-200-NMH-75-X 3190-6409)
OBSOLETE (use EZ-195-NMH-X 3190-6497)
OBSOLETE - Please use EZ-195-TM-RP-X (3190-6142)
OBSOLETE (use EZ-200-TM-X 3190-6418)
OBSOLETE
SMA-Male (plug) crimp/reverse polarity (female pin) - obsolete - use 3190-2385
OBSOLETE (use TC-200-SM-SS-X 3190-6544)
OBSOLETE - Please use TC-200-TM-X (3190-6417)
OBSOLETE (use LMR-240-LLPX)
OBSOLETE (use EZ-240-FM-75-X 3190-6411)
OBSOLETE (use EZ-240-NMH-75-X 3190-6284)
OBSOLETE (use EZ-240-NMH-X 3190-6382)
OBSOLETE (use EZ-240-QM-X 3190-6564)
OBSOLETE (use EZ-240-SM-RA-X 3190-6551) - reason compatibility with WSB-240- boot
OBSOLETE (use EZ-240-SM-X 3190-6319)
OBSOLETE (use EZ-240-TF-RP-X 3190-6372)
OBSOLETE (use EZ-240-TM-X 3190-6494)
OBSOLETE (use TC-240-716M-RA-D 3190-2983)
OBSOLETE - Please use TC-240-BM-X (3190-6380)
OBSOLETE (use TC-240-BM-RA-D 3190-6552)
OBSOLETING, Type F-Male (plug) crimp connector (solder-on pin) for LMR-240, no braid trim+A1
OBSOLETE (use TC-240-NF-BH-X 3190-6545)
OBSOLETE (use TC-240-NF-BH-X 3190-6545)
OBSOLETE - Please use EZ-240-NMH-75-X (3190-6284)
OBSOLETE - Please use TC-240-NMH-X (3190-6381)
OBSOLETE (use TC-240-NMH-RA-D 3190-6549)
OBSOLETE (use TC-240-SM-RA-SS-D 3190-6546)
OBSOLETE (use TC-240-TM-RA-D 3190-6547)
OBSOLETE (use TC-240-TM-X 3190-6550)
OBSOLETE (use LMR-300-LLPX)
OBSOLETE
OBSOLETE
OBSOLETE - Please use EZ-300-SM-X (3190-8014)

OBSOLETE - Please use TC-300-TM-X (3190-6601)
OBSOLETE (use LMR-400-LLPX)
OBSOLETE - Please use EZ-400-FM-75-X (3190-6482)
OBSOLETE (use EZ-400-FM-75-X 3190-6482)
OBSOLETE - Please use EZ-400-NF-BH-X (3190-6328)
OBSOLETE (use EZ-400-NMH-75-X 3190-6408)
OBSOLETE (use EZ-400-NMH-X 3190-6342)
OBSOLETE - Please use EZ-400-NMK-X (3190-6071)
OBSOLETE (use EZ-400-QNM-X 3190-8043)
OBSOLETE - Please use EZ-400-UM-X (3190-8025)
OBSOLETE - Please use TC-400-716M-X (3190-2597)
OBSOLETE (use TC-400-BM-X 3190-6232)
OBSOLETE - Please use TC-400-NF-X (3190-2815)
OBSOLETE - Please use TC-400-NF-X (3190-8219)
OBSOLETE - Please use EZ-400-NF-PL-X (3190-8183)
OBSOLETE - Please use TC-400-NMH-X (3190-2626)
OBSOLETE - Please use EZ-400-NMH-75-X (3190-6408)
OBSOLETE - Please use TC-400-NMH-RA-D (3190-2293)
OBSOLETE
OBSOLETE (use LMR-500-LLPX)
OBSOLETE - Please use TC-500-NF-BH (3190-8028)
OBSOLETE - Please use TC-500-NMH-X (3190-6587)
OBSOLETE - Please use TC-500-NMH-X (3190-6587)
OBSOLETE (use TC-500-NMH-RA-D 3190-2970)
OBSOLETE (use TC-500-NMH-X 3190-6587)
OBSOLETE (use TC-500-TM-X 3190-6009)
OBSOLETE - Please use EZ-500-UM-X (3190-8032)
OBSOLETE (use LMR-600-LLPX)
OBSOLETE (use EZ-600-716M-RA-X 3190-6471)
OBSOLETE (use EZ-600-FM-75-X 3190-6410)
OBSOLETE - Please use EZ-600-NF-BH-X (3190-8034)
OBSOLETE (use EZ-600-NMH-RA-X 3190-6387)
OBSOLETE - Please use EZ-600-NMH-X (3190-2627)
OBSOLETE - Please use EZ-600-UM-X (3190-8036)
OBSOLETE - Please use TC-600-716M-X (3190-2642)
OBSOLETE (use TC-600-716M-RA-D 3190-6211)
OBSOLETE - Please use EZ-600-NF-BH-X (3190-8034)
OBSOLETE - Please use EZ-600-NF-BH-X (3190-8034)
OBSOLETE - Please use EZ-600-NF-PL-X (3190-8185)
OBSOLETE - Please use TC-600-NMH-X (3190-2628)
OBSOLETE
OBSOLETE - Please use TC-600-UM-X (3190-8172)
OBSOLETE (use LMR-900-LLPX)
OBSOLETE (use EZ-900-716FC-2-SP 3190-6512)
OBSOLETE (use EZ-900-716MC-SP 3190-6452)
OBSOLETE (use EZ-900-716MC-SP 3190-6452)

OBSOLETE (use EZ-900-716MC-RA-SP 3190-6423)
OBSOLETE (use EZ-900-78EIA-2-SP 3190-6441)
OBSOLETE (use EZ-900-78EIA--RA-2-SP 3190-6442)
OBSOLETE (useEZ-900-NFC-2-SP 3190-6444)
OBSOLETE (useEZ-900-NFC-2-SP 3190-6444)
OBSOLETE (use EZ-900-NMC-2-SP 3190-6443)
OBSOLETE (use EZ-900-NMC-2-SP 3190-6443)
OBSOLETE (use LMR-1200-LLPX)
OBSOLETE (Use EZ-1200-NFC-PL-2 3190-6370)
OBSOLETE (Use EZ-1200-NMC-PL-2 3190-6021)
OBSOLETE (use CST-240A)
OBSOLETE (use 3192-256)
OBSOLETE (use DBT-U)
OBSOLETE (use DBT-U)
OBSOLETE (use CT-U 3192-181)
OBSOLETE (use CST-240A)
OBSOLETE - Prep tool - without replacement
OBSOLETE (use CST-500)
OBSOLETE (use CST-600)
OBSOLETE (use CST-600)
OBSOLETE (use ST-900C LMR-900 cables or ST-1200CH for LMR-1200 cables)
OBSOLETE (use TC-250-NX10M-LP 3190-6660)
OBSOLETE (use TC-250-716F-LP 3190-3002)
OBSOLETE (use TC-250-716M-LP 3190-2853)
OBSOLETE (use TC-250-716M-RA-LP 3190-2854)
OBSOLETE (use TC-250-NF-LP 3190-2851)
OBSOLETE (use TC-250-NM-LP 3190-2833)
OBSOLETE (use TC-250-NM-RA-LP 3190-6186)
OBSOLETE (use TC-250-NM-RA-LP 3190-6186)
OBSOLETE (use TC-375-716F-LP 3190-6119)
OBSOLETE (use TC-375-716M-LP 3190-2940)
OBSOLETE (use TC-375-716M-RA-LP 3190-6064)
OBSOLETE (use TC-375-NF-LP 3190-3064)
OBSOLETE (use TC-375-NM-LP 3190-2951)
OBSOLETE (use TC-375-NM-RA-LP 3190-6061)
OBSOLETE (use TC-500-716F-LP 3190-6281)
OBSOLETE (use TC-500-716M-LP 3190-6267)
OBSOLETE (use TC-500-716M-RA-LP 3190-6279)
OBSOLETE (use TC-500-NF-LP 3190-3011)
OBSOLETE (use TC-500-NM-LP 3190-6216)
OBSOLETE (use TC-500-NM-RA-LP 3190-6278)
OBSOLETE (use TC-500-4310M-LP 3190-6369)
OBSOLETE (use TC-500-716M-LP 3190-6267)
OBSOLETE (use TC-500-NM-LP 3190-6216)
OBSOLETE (use TC-402-NX10M-LP 3190-6659)
OBSOLETE (use TC-250-NX10M-LP 3190-6660)



OBSOLETE (use TC-250-716F-LP 3190-3002)
OBSOLETE (use TC-250-716M-LP 3190-2853)
OBSOLETE (use TC-250-716M-RA-LP 3190-2854)
OBSOLETE (use TC-250-NF-LP 3190-2851)
OBSOLETE (use TC-250-NM-LP 3190-2833)
OBSOLETE (use TC-250-NM-RA-LP 3190-6186)
OBSOLETE (use TC-250-NM-RA-LP 3190-6186)
OBSOLETE (use BH-S38-NH)
OBSOLETE (use BH-58-NH or SH-U900T)
OBSOLETE (use BH-58-NH or SH-U900T)
Vinyl Mastic Weatherproofing Kit; (for 2 connections) OBSOLETE (use WK-S-1 or WK-S-2)